



**Key**

1. Impeller	6. Packing Gland	11. Shaft	16. Base
2. Shell	7. Water Flinger	12. Shaft Sleeve	17. Adjusting Bolt
3. Suction Liner	8. Knockout	13. Bearing Units*	18. Cleanout
4. Suction Plate	9. Water Ring	14. Split Collar	19. Cleanout Cover
5. Packing Plate	10. Packing	15. Adjusting Plate	20. Support Brace

\*will be different with oil units

**THE PEARCE GROUP, INC:**  
 16161 Airline Hwy. Prairieville, LA  
 Toll Free: 1-800-264-1790  
 Local: (225) 673-6188  
 Fax: (225) 673-8106  
 Web: [www.pearceusa.com](http://www.pearceusa.com)  
 Email: [info@pearceusa.com](mailto:info@pearceusa.com)

